

The Mobile Robot Company

Documentation — complete manual · 2026-08-01

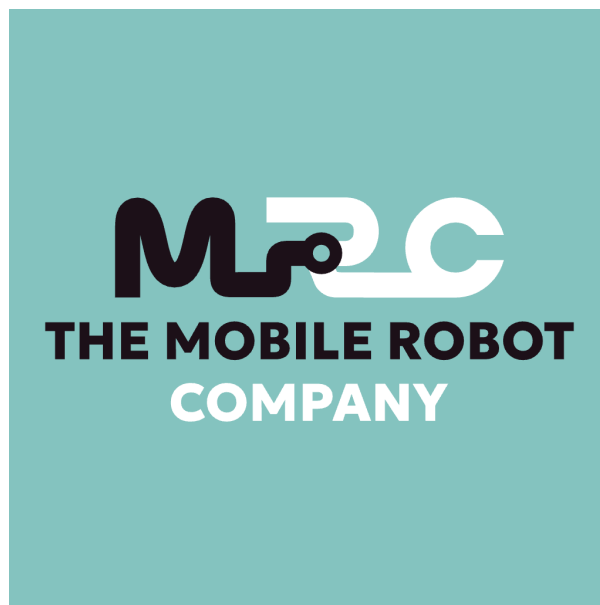


Table of contents:

Welcome

Welcome

This is the documentation for **The Mobile Robot Company** and the **J1600 self-driving pallet jack**.

The J1600 is a dual-mode machine: an operator can drive it like an ordinary pallet jack, or hand a route over to the robot and let it drive itself. The documentation covers both sides — day-to-day operation, route teaching, integration and support.

ⓘ WORK IN PROGRESS

This site is being built out. Sections will appear here as they are written.